

## LENGTH / MOUNTING DIMENSIONS

## RUN CONFIGURATION INFORMATION


ORDERING CODE	LENGTH A*	LENGTH B*	LENGTH C*	LENGTH D*	LENGTH E*
2	22-5/8"	22-3/8"	22-1/8"	16-5/8"	19-3/8"
3	33-5/8"	33-3/8"	33-1/8"	27-5/8"	30-3/8"
4	44-5/8"	44-3/8"	44-1/8"	38-5/8"	41-3/8"
5	55-5/8"	55-3/8"	55-1/8"	49-5/8"	52-3/8"
6	66-5/8"	66-3/8"	66-1/8"	60-5/8"	63-3/8"
7	77-5/8"	77-3/8"	77-1/8"	71-5/8"	74-3/8"
8	88-5/8"	88-3/8"	88-1/8"	82-5/8"	85-3/8"

ORDERING CODE	DESCRIPTION
SN	Single
ST	Starter
AD	Adder
TR	Terminator


\* Add 4" to dimension for any fixture using the S1 occupancy sensor option

## RUN INFORMATION


### Back Plan - Surface Mount Single Fixture Option

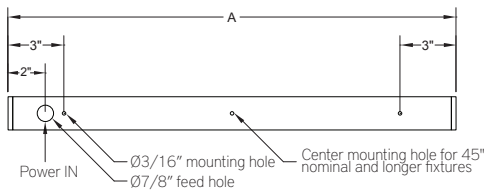


### Side View - Surface Mount Single Fixture Option

 

### Back Plan - Surface Mount Continuous Run Option

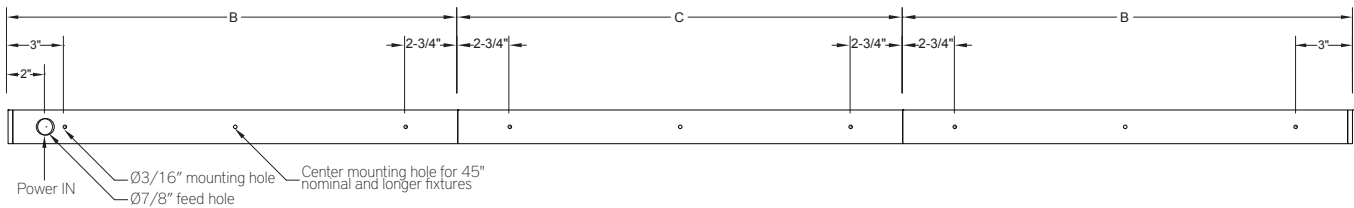


### Side View - Surface Mount Continuous Run Option

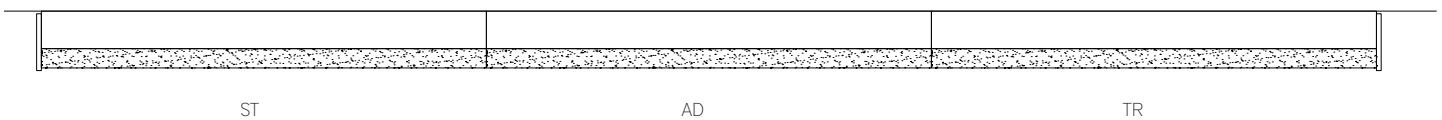


RUN INFORMATION

Side View - Cable Mount Single Fixture Option

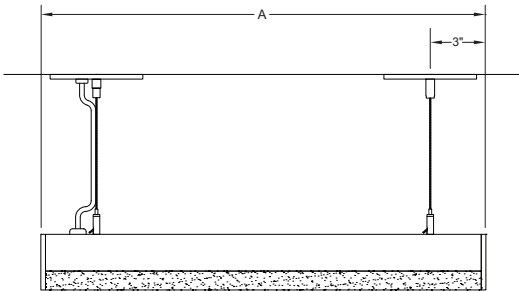

SN

Side View - Cable Mount Continuous Run Option

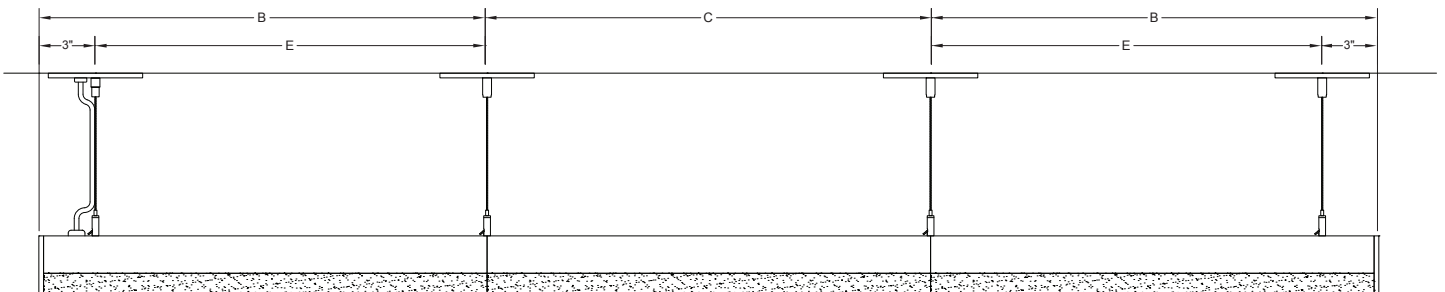

ST

AD

TR